

Installation Guide

Installation of your new splashback will require TWO people. Remember that glass is FRAGILE and it requires two people wearing the APPROPRIATE SAFETY EQUIPMENT to install.

What you will need




- Tape Measure
- Spatula
- Neutral Cure Silicone
- Pencil
- Safety Glasses
- Gloves
- Double Sided Tape
- 3mm Rubber Blocks

Installation Instructions


STEP 1

Make sure all walls and surfaces are smooth, free from grime and dirt and are completely dry.

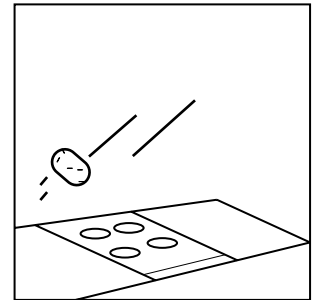


STEP 2

Place two horizontal strips of double sided tape to each panel along with the neutral silicone in a wave pattern. Rubber blocks may need to be used if spacing is required.

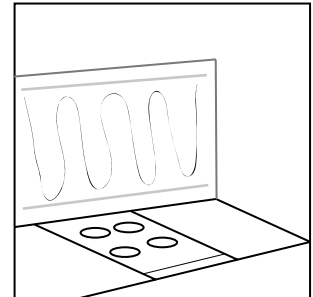

STEP 3

Make the final adjustments and press the splashback into place. Be sure to leave at least 24 hours for the silicone to cure.

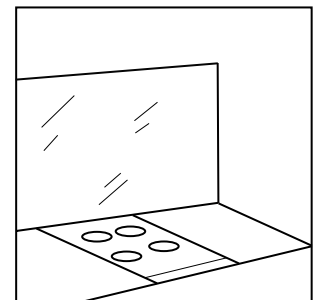

STEP 4

Once the silicone is cured finish the exposed edges with a thin bead of neutral cure silicone, finishing off with a glazing spatula.

Designer Splashbacks do not take any responsibility for injuries or breakages in the installation process of your splashback. Installation is done at your own risk and all safety measure should be taken to avoid injury.